

Map View: Shape and Color Meanings

The shape that appears on the map for an asset, as well as the color of the shape, have different meanings. Keep in mind that these shapes/colors are configurable and can be changed.

PRODUCTION ENVIRONMENT

JU_INSPECTION (Joint-Use Inspection Conversation)

- The default is a blue circle
- When a pole's Inspection Status = Complete, it will be a green diamond
- When a pole's Inspection Status = Not in Field, it will be an orange circle
- When a pole's Inspection Status = Inaccessible, it will be a red X

AM_AUDIT (Ameren Audit Conversations)

- The default is an orange circle



- When a pole's Audit Status = No JU Attachments, it will be a gray diamond



- When a pole's Audit Status = Complete, it will be a green diamond



- When a pole's Audit Status = Not In Field, it will be a blue X



JU_PTA (Joint-Use Permit to Attach Conversation)

- When a pole's Status = Pending Survey, it will be a blue circle



- When a pole's status = Survey Complete, it will be a green circle
- When a pole's status = Request MR Revision, it will be an orange diamond
- When a pole's status = Remove From Application, it will be a blue X
- When a pole's Work Type = No Construction, it will be a green circle
- When a pole's work type = Transfer, it will be a green X
- When a pole's Work Type = Make Ready, it will be a blue diamond

COMED_INVENTORY (ComEd Inventory Conversation)

- The default is an orange circle
- When a pole's Inventory Status = No JU Attachments, it will be a black diamond
- When a pole's Inventory Status = Complete, it will be a green diamond
- When a pole's Inventory Status = Not In Field, it will be a blue X

PECO_OTMR (PECO One-Touch Make Ready)

- When a pole's ID is < 0 (non-referenced pole), it will be a blue diamond

PECO_PTD (PECO Permit to Detach)

- When a pole's ID < 0 (non-referenced pole), it will be a blue diamond